

ThinkPad X1 Tablet User Guide







1. ATTACHING THE THIN KEYBOARD TO YOUR TABLET

The Thin Keyboard magnetically attaches to your tablet as shown by bringing the two close together. When the Thin Keyboard gets close enough, it aligns and snaps into place. You can easily remove the Thin Keyboard by pulling it away.




2. SETTING UP THE TABLET

a. Press the power button to turn on the tablet as shown



b. Your tablet has a built-in **kickstand**. By flipping the kickstand open, you can use the tablet in either **Stand Mode** or **Stylus Mode**.

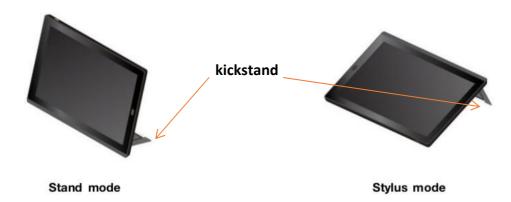



3. SIGN IN TO WINDOWS 10

a. Press the **power button** to turn on the tablet. **Login screen** to Windows10 will appear.



b. Just push **ENTER** button to login




c. Tablet now ready to use






4. USING THE MULTI-TOUCH SCREEN

Use the **touch gestures** to interact with your tablet.




Tap

Tap on the screen to open, select, or activate the item you tap.




Tap and hold

Tap and hold on the screen to open a menu with multiple options.




Slide

Slide leftward or rightward on the screen to scroll through items, such as lists, pages, and photos.




Drag

Drag an item to the desired location to move an object.




Zoom in

Put two fingers on the screen and move them farther apart to zoom in.




Zoom out

Put two fingers on the screen and move them closer together to zoom out.



Rotate

Put two or more fingers on an item, and then rotate your fingers clockwise or counterclockwise.

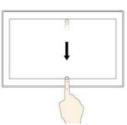

Swipe in from the top edge to the bottom edge

Close the current full-screened app.

5. CONNECT TO WIFI

a. Touch the **Wifi** icon as shown at the right bottom of the screen.





b. Choose any preferred network and connect to Wifi.

Corector autombicamente

Conyclar

Conyclar

Conyclar

Conyclar

Conyclar

Conyclar

Configuración de red.

Consiguración de red.

'CONNECT'




6. SHUT DOWN THE TABLET

a. Touch the 'Power' icon as shown at the menu.



b. Select 'Shut Down'

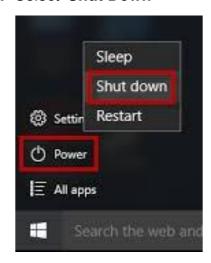

c. Windows 10 will shut down in 10-20 seconds.



